
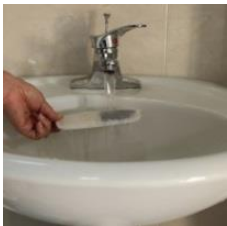











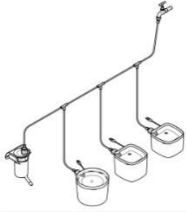
Product Installation Steps

Step1	Step 2-1
	
<p>Install the pump ,fixed USB cable clip and place the filter box</p>	<p>First, rinse with water and then soak the filter cartridge in water for about 5 minutes</p>
Step 2-2.	Step 3
	
<p>Put the filter cartridge into the filter box.</p>	<p>Insert "Auto-Water Filler" into back of the fountain lid and press it tightly.</p>




Product Installation Steps

Step 4	Step 5
	
<p>Insert the pump's water tube into the back of the fountain lid</p>	<p>Press and fix the installed fountain lid back onto the water tank</p>
Step 6	Step 7
	
<p>Lock "lock ring" to prevent pets opening and water leaking out.</p>	<p>Insert the LLDPE tube and lock it with the quick connector together.</p>




Product Installation Steps

Step 8	Step 9
	
<p>Connect the quick connector onto the adapter of the lid.</p>	<p>Lock "1/2-inch female threaded connector" into the faucet and open the faucet, wait for about 5-10 min. letting the water level exceed PUMP, and plug in the USB power.</p>
Step10	Step 11
	
<p>Keep the faucet turned ON. It will automatically fill in the water tank when the water level drops.</p>	<p>Connect several Hamco AF series for each pet's own water fountain supply.</p>

How to assemble a quick fitting tees and Tubes.

Step 1	Step 2	Step 3
		
Insert the LLDPE tube to the bottom of the quick fitting union tee.	Attach C-clip to prevent the Tube from falling out.	Assembly completed.

How to disassemble a quick fitting tees and Tubes

Step 1	Step 2	Step3
		
	Remove the C-clip.	Pull out the tube.